

Company name* :

Field of activity* :

Project:

Drawing N°:

* Required fields

1 - Type of handle:

B



K



M



W



Z



Color :

Black

Other (contact us)

2 - Ring finish:

Shiny chrome

Black

Other (contact us)

3 - Selector:

(2) Status on mechanical position of handle:


N: Original position held,
One only N possible!

S: Position maintained.

U: Position not maintained with self-returning to previous position stable
Slight notching.

G: Mechanical Position nonexistent.

X: Position prohibited.

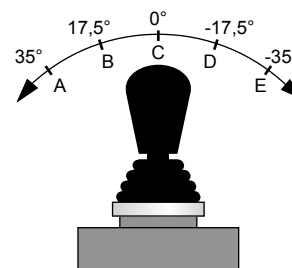

[See example](#)


Electrical diagram :

Check the table below using:

X: When the contact is closed
X --- X: for electrical continuity
between two positions

(1) Connect the contacts if shunt.

Contacts⁽¹⁾

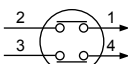

Handle positions	A	B	C	D	E
Angular positions	+35°	+17.5°	0°	-17.5°	-35°
States of handle positions ⁽²⁾ (N, S, U, G, X)					
Stage 1	1 - 2 3 - 4				
Stage 2	5 - 6 7 - 8				
Stage 3	9 - 10 11 - 12				

4- Type of contact electric stage:

Standard version : Ag/Ni

Other versions : Ag/Pal Gold Flash
(contact us)

5 - Type of connection:

IP2
Screw and bracket

Screw and bracket

Screw washer

Double tabs for 6.35 mm clip

6 - Label (option) :

Shape, color, engraving (contact us)




IP55 (Adhesive label)

Thickness of panel from 1 to 5 mm.




[See example](#)

Examples :

Toggle 3 positions with +35° and -35° positions prohibited




Handle positions	A	B	C	D	E
Angular positions	+35°	+17.5°	0°	-17.5°	-35°
Contacts ⁽¹⁾	State of handle positions ⁽²⁾ (N, S, U, G, X)				
	Stage 1	1 - 2		X	
		3 - 4			X
	Stage 2	5 - 6	X		
		7 - 8			
	Stage 3	9 - 10			
		11 - 12			

Toggle continuity between contacts*

Handle positions	A	B	C	D	E
Angular positions	+35°	+17.5°	0°	-17.5°	-35°
Contacts ⁽¹⁾	State of handle positions ⁽²⁾ (N, S, U, G, X)				
	Stage 1	1 - 2	X-----X		
		3 - 4		X-----X	
	Stage 2	5 - 6		X-----X	
		7 - 8			X-----X
	Stage 3	9 - 10			
		11 - 12			

* The continuity between contacts is possible only with the toggles with an angular distance of 35° between 2 positions of handle.

Toggle 5 positions

Handle positions	A	B	C	D	E
Angular positions	+35°	+17.5°	0°	-17.5°	-35°
Contacts ⁽¹⁾	State of handle positions ⁽²⁾ (N, S, U, G, X)				
	Stage 1	1 - 2	X		
		3 - 4		X	
	Stage 2	5 - 6			
		7 - 8			X-----X
	Stage 3	9 - 10	X-----X		
		11 - 12			

Example : MONTE - DESCENTE

